


How to change the hook and spring on your blade bone puller

Reverse or exchange the hook:

1. Dismantle 4 bolts and remove the lower plate from the blade bone puller - position A
2. Dismantle 2 bolts on the lower plate to remove the plate sustaining the hook - position B
3. Now you can exchange or reverse the hook - position C
4. Re-mount bolts position A & B, ensure to use Loctite when remounting

Change the spring:

5. Dismantle the bolt and remove spring - position E
6. Renew the spring, ensure it is aligned in the milling line for correct re-positioning hook of - position D

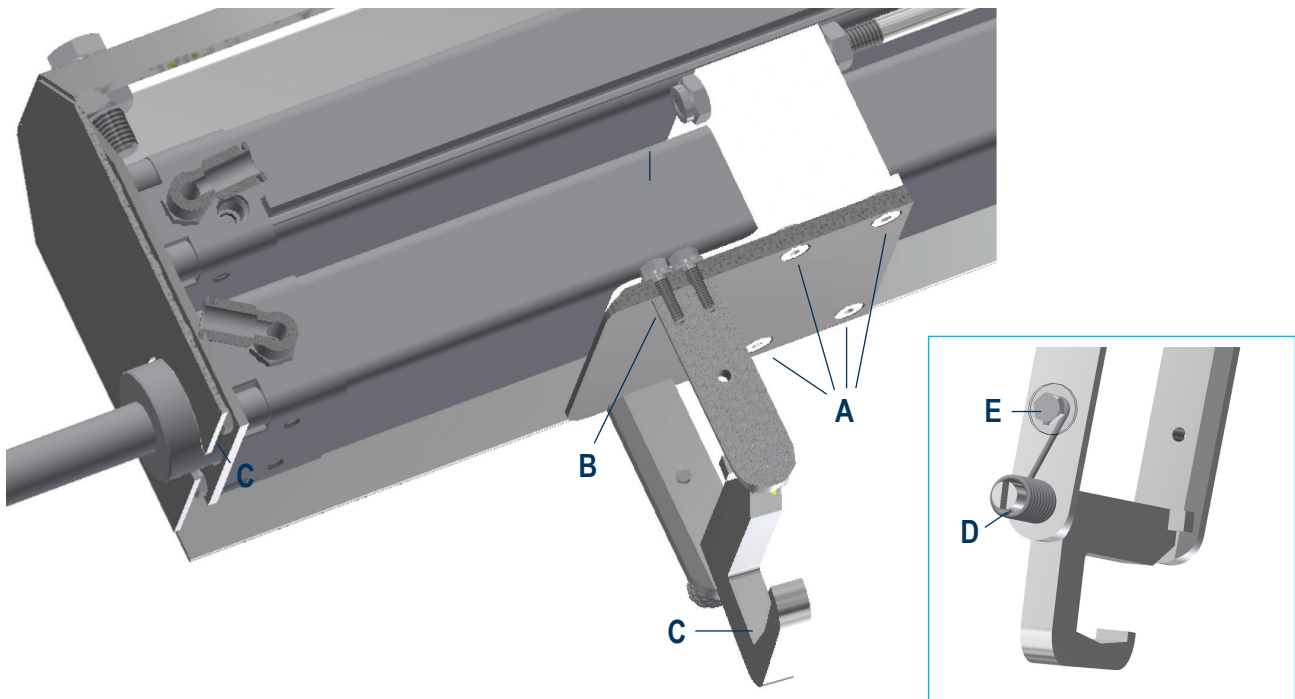

Hook - part number	Left spring - part number	Right spring - part number
4001247072	4001247043	4001247044

Contact

Central/Eastern Europe
Phone: +49 252 185 070
E-mail: as.ce@frontmatec.com

Central/Eastern Europe, Poland
Phone: +48 227 345 551
E-mail: as.ce@frontmatec.com

Northern Europe
Phone: +45 36 999 099
E-mail: as.ne@frontmatec.com

Southern Europe
Phone: +34 932 643 800
E-mail: as.se@frontmatec.com

Russia
Phone: +7 495 424 9559
E-mail: as.ru@frontmatec.com

Western Europe
Phone: +31 886 294 000
E-mail: as.we@frontmatec.com