
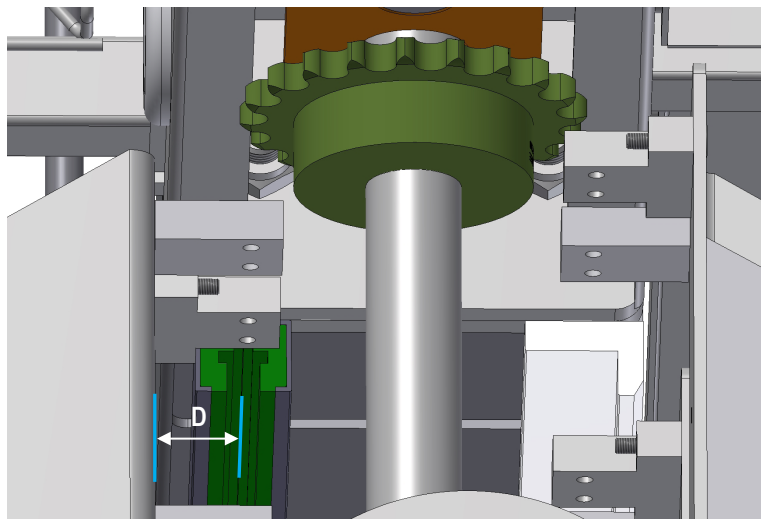


How to tension the chain on your TAEI

1. Place a socket wrench on chain adjuster nut - placed at the bottom of the machine beneath the lower chain wheel - **position A**
2. Place another socket wrench on top nut and turn left to tension the chain - **position B**
3. Repeat on all 4 threaded rods, both left and right side
4. IMPORTANT - Control that the right and left side of the machine has the same distance after tensioning - **position C**
5. Control that the distance between the shown edge and the center of the chain is 40-42 mm - **position D**

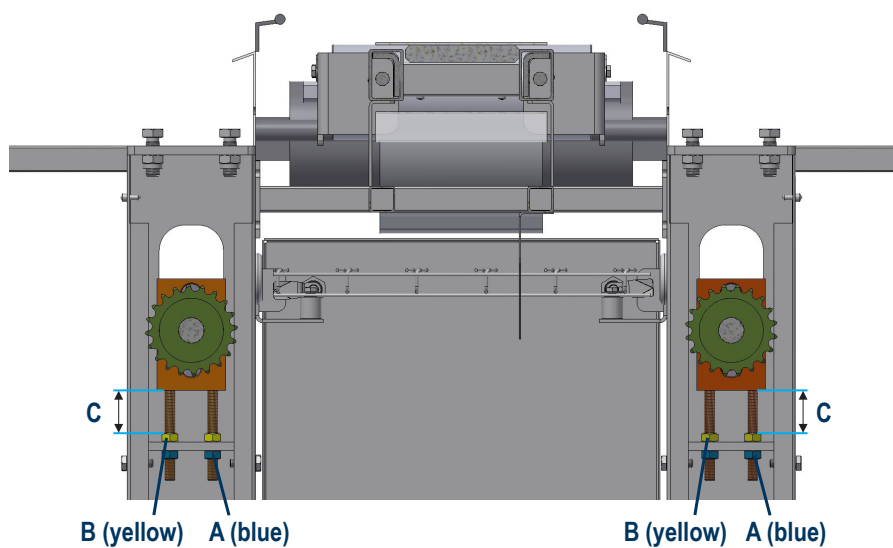

Contact

Central/Eastern Europe
Phone: +49 252 185 070
E-mail: as.ce@frontmatec.com

Central/Eastern Europe, Poland
Phone: +48 227 345 551
E-mail: as.ce@frontmatec.com

Northern Europe
Phone: +45 36 999 099
E-mail: as.ne@frontmatec.com

Southern Europe
Phone: +34 932 643 800
E-mail: as.se@frontmatec.com

Russia
Phone: +7 495 424 9559
E-mail: as.ru@frontmatec.com

Western Europe
Phone: +31 886 294 000
E-mail: as.we@frontmatec.com