

AFTER SALES // HOW TO

HOW TO ADJUST SENSOR SETTINGS ON YOUR AGOL

Adjust factory settings:




1. Keep Q pressed and power ON > 10 seconds until both yellow LEDs flash 3 X at the same time - position A

Near distance adjustment:

1. Place, ex. a box on the conveyor belt, align the box with the edge of the conveyor belt for near distance measurement - position B
2. Press Q > 3 seconds until green and yellow LED flash at the same time - position A
3. Proceed to far distance adjustment.

Far distance adjustment:

1. Place, ex. a box on the opposite side of conveyor and align the back of the box with the conveyor for far distance measurement - position C
2. Press Q > 1 seconds until green and yellow LED flash at the same time - position A
3. Near and far distance adjustment are finished

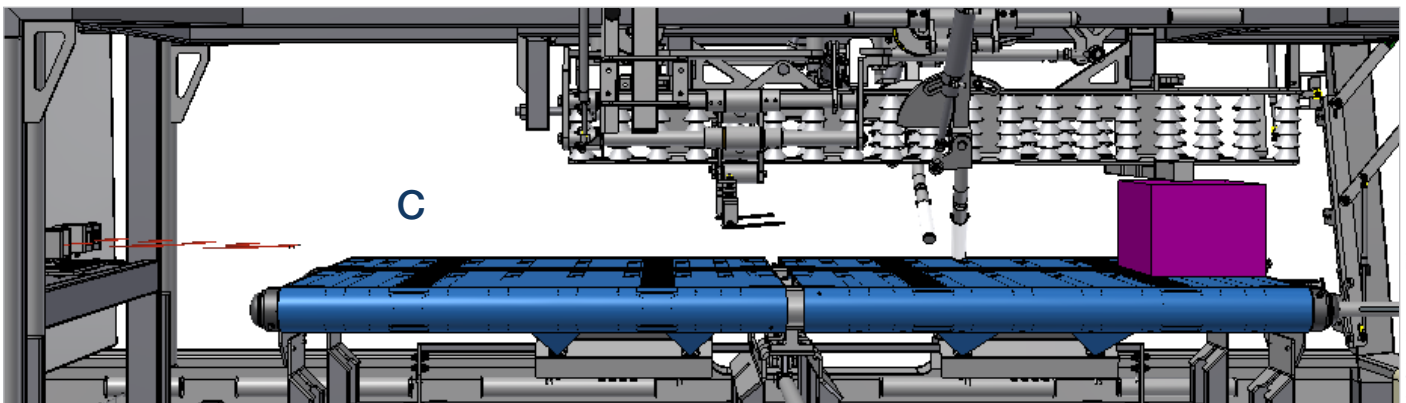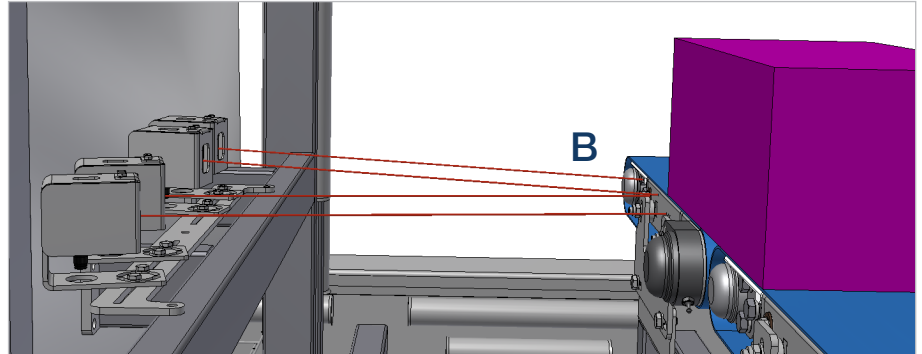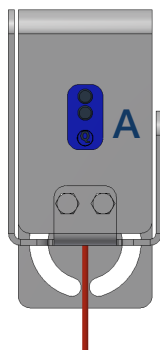

AfterSales_V1-0_2021_EN

CONTACT

Southern Europe
+34 932 643 800
as.se@frontmatec.com

Central/Eastern Europe
+49 252 185 070
as.ce@frontmatec.com

Northern Europe
+45 36 999 099
as.ne@frontmatec.com

Poland
+48 227 345 551
as.ce@frontmatec.com

Western Europe
+31 886 294 000
as.we@frontmatec.com

Russia
+7 495 424 9559
as.ru@frontmatec.com