

SERVICE SOLUTIONS // HOW TO

HOW TO ADJUST SENSOR SETTINGS ON YOUR AGOL

Adjust factory settings:



1. Keep Q pressed and power ON > 10 seconds until both yellow LEDs flash 3 X at the same time. - position A

Near distance adjustment:

1. Place, ex. a box on the conveyor belt, align the box with the edge of the conveyor belt for near distance measurement. - position B
2. Press Q > 3 seconds until green and yellow LED flash at the same time. - position A
3. Proceed to far distance adjustment.

Far distance adjustment:

1. Place, ex. a box on the opposite side of conveyor and align the back of the box with the conveyor for far distance measurement. - position C
2. Press Q > 1 seconds until green and yellow LED flash at the same time. - position A
3. Near and far distance adjustment are finished.

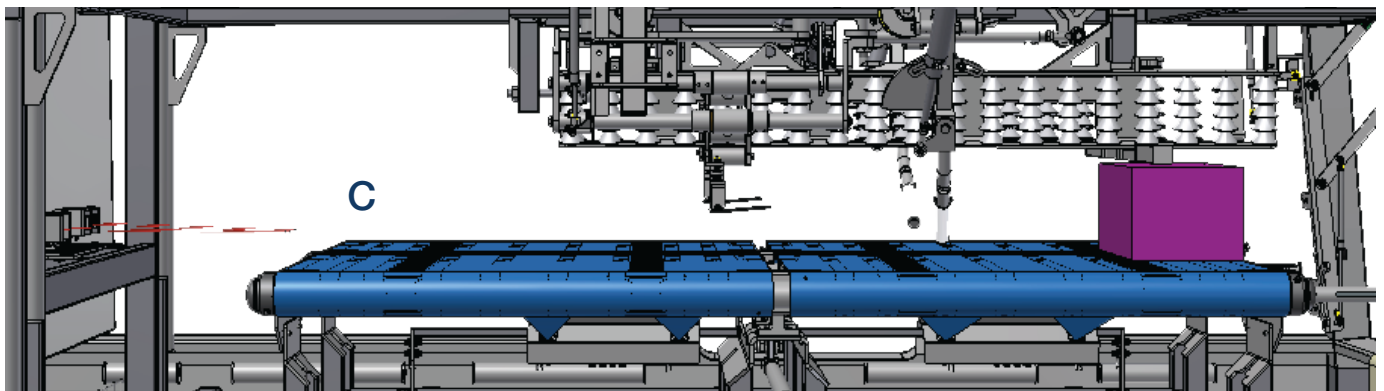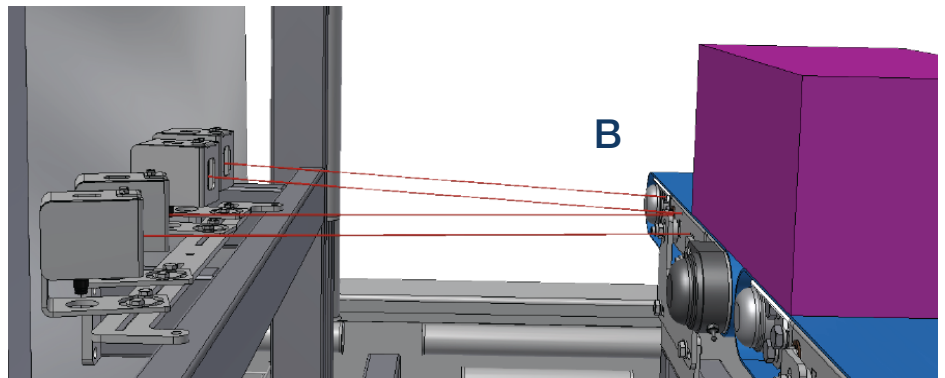

ServiceSolutions_V1-0_2023_EN

CONTACT

Central/Eastern Europe
+49 252 185 070
service.de@frontmatec.com

Northern Europe, Kolding
+45 36 999 099
service.kol.dk@frontmatec.com

Northern Europe, Tandslet
+48 227 345 551
service.tan.dk@frontmatec.com

Southern Europe
+34 932 643 800
service.es@frontmatec.com

Western Europe
+31 886 294 000
service.nl@frontmatec.com