

SERVICE SOLUTIONS // HOW TO


LIFE PROLONGING TIPS WHEN RENOVATING THE HAM-DIVIDER GEARBOX ON YOUR AUTO-LINE BUNGDROPPER

When you renovate the axle with the crown wheel with new bearings.

1. The housing for the crown wheel must be filled with grease before reassembling the gearbox - position A
2. Push shaft - position B up to the crown wheel and then take it 1 mm back. Now lock with the bolt - position C
3. Tighten position C - IMPORTANT - there must be a little space between the gear wheel teeth - position D

Additional tip

4. If the bushing on the dummy part needs to be replaced, you can use a 16 mm threading tap to pull it up - position E

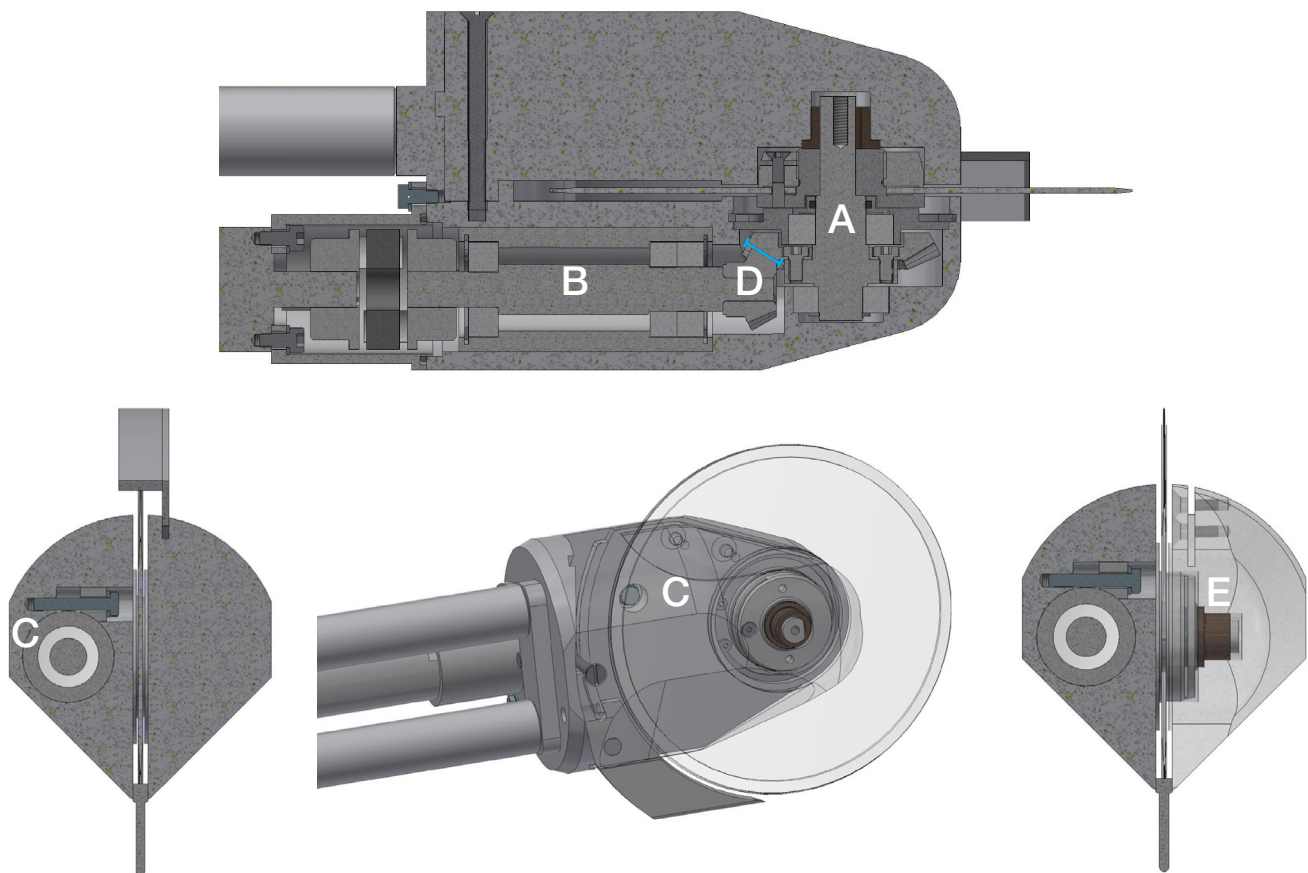

Bronze bushing on dummy - part no.: 4001010645

Renovation kit - crown wheel and bracket - part no. 4001070209

CONTACT

Central/Eastern Europe
+49 252 185 070
service.de@frontmatec.com

Northern Europe, Kolding
+45 36 999 099
service.kol.dk@frontmatec.com

Northern Europe, Tandslet
+48 227 345 551
service.tan.dk@frontmatec.com

Southern Europe
+34 932 643 800
service.es@frontmatec.com

Western Europe
+31 886 294 000
service.nl@frontmatec.com