

## SERVICE SOLUTIONS // HOW TO

## HOW TO PROLONG THE LIFETIME ON YOUR AUTOMARKER M1™ WITH PROPER CLEANING

## Start of day


Preparation: Have a paper towel ready & place the waste tube from the CIP box in an appropriate container.

- 1. Press "ink" button position A until you can see the ink in the tubes leading to the print head position D
- 2. Release the "ink" button position A
- 3. Place a paper towel in front of the print head and press the "activate" button **position C** hold it for 10-15 seconds to ensure nozzles are filled with ink for a proper print on the animal
- 4. Repeat procedure on the other print head
- 5. Make sure the AutoMarker M1™ is online ready to print

## End of day

Preparation: Have a paper towel and the protective cap ready. Place the waste tube from the CIP box in an appropriate container.

- 1. Press the "cleaner" button position B until the ink is flushed out of the tubes leading to the print head position E
- 2. Release the "cleaner" button position B
- 3. Place a paper towel in front of the print head and press the "activate" button **position C** hold it for 10-15 seconds to clean the nozzles from ink
- 4. Put the protective cap on the print head
- 5. Repeat procedure on the other print head

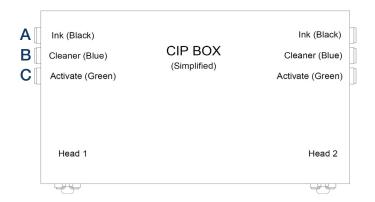





iceSolutions V1-0 2023 E