

## AFTER SALES // HOW TO


# LIFE PROLONGING TIPS WHEN RENOVATING THE HAM-DIVIDER GEARBOX ON YOUR AUTOLINE BUNGDROPPER

When you renovate the axle with the crown wheel with new bearings

1. The housing for the crown wheel must be filled with grease before reassembling the gearbox - **position A**
2. Push shaft - **position B** up to the crown wheel and then take it 1 mm back. Now lock with the bolt - **position C**
3. Tighten **position C** - IMPORTANT - there must be a little space between the gear wheel teeth - **position D**

### Additional tip

4. If the bushing on the dummy part needs to be replaced, you can use a 16 mm threading tap to pull it up - **position E**

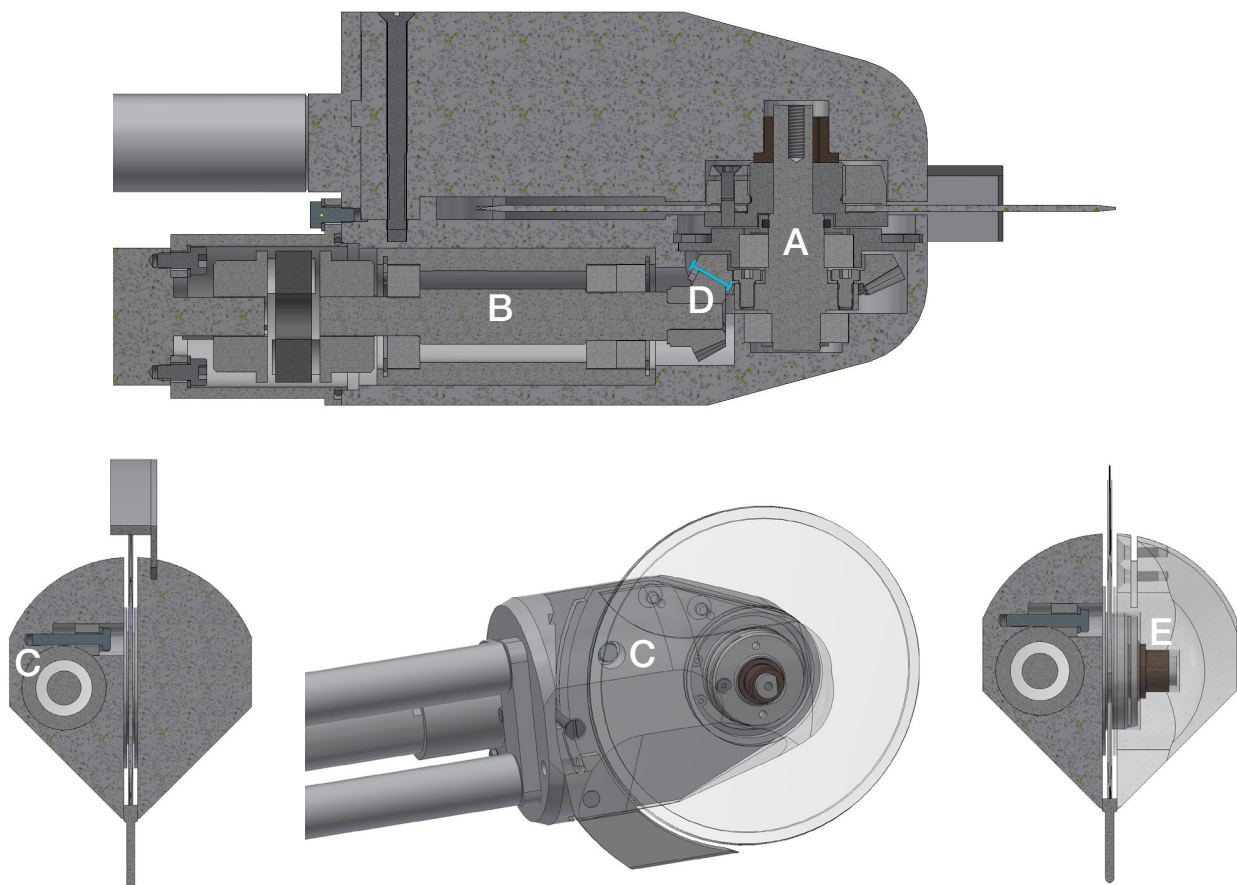

Bronze bushing on dummy - part no.: 4001010645

Renovation kit - crown wheel and bracket - part no. 4001070209

## CONTACT

**Southern Europe**  
+34 932 643 800  
as.se@frontmatec.com

**Central/Eastern Europe**  
+49 252 185 070  
as.ce@frontmatec.com

**Northern Europe**  
+45 36 999 099  
as.ne@frontmatec.com

**Poland**  
+48 227 345 551  
as.ce@frontmatec.com

**Western Europe**  
+31 886 294 000  
as.we@frontmatec.com

**Russia**  
+7 495 424 9559  
as.ru@frontmatec.com