

AFTER SALES // HOW TO

HOW TO PROLONG THE LIFETIME ON YOUR AUTOMARKER M1™ WITH PROPER CLEANING

Start of day


Preparation: Have a paper towel ready & place the waste tube from the CIP box in an appropriate container.

1. Press “ink” button - **position A** - until you can see the ink in the tubes leading to the print head - **position D**
2. Release the “ink” button - **position A**
3. Place a paper towel in front of the print head and press the “activate” button - **position C** - hold it for 10-15 seconds to ensure nozzles are filled with ink for a proper print on the animal
4. Repeat procedure on the other print head
5. Make sure the AutoMarker M1™ is online ready to print

End of day

Preparation: Have a paper towel and the protective cap ready. Place the waste tube from the CIP box in an appropriate container.

1. Press the “cleaner” button - **position B** - until the ink is flushed out of the tubes leading to the print head - **position E**
2. Release the “cleaner” button - **position B**
3. Place a paper towel in front of the print head and press the “activate” button - **position C** - hold it for 10-15 seconds to clean the nozzles from ink
4. Put the protective cap on the print head
5. Repeat procedure on the other print head

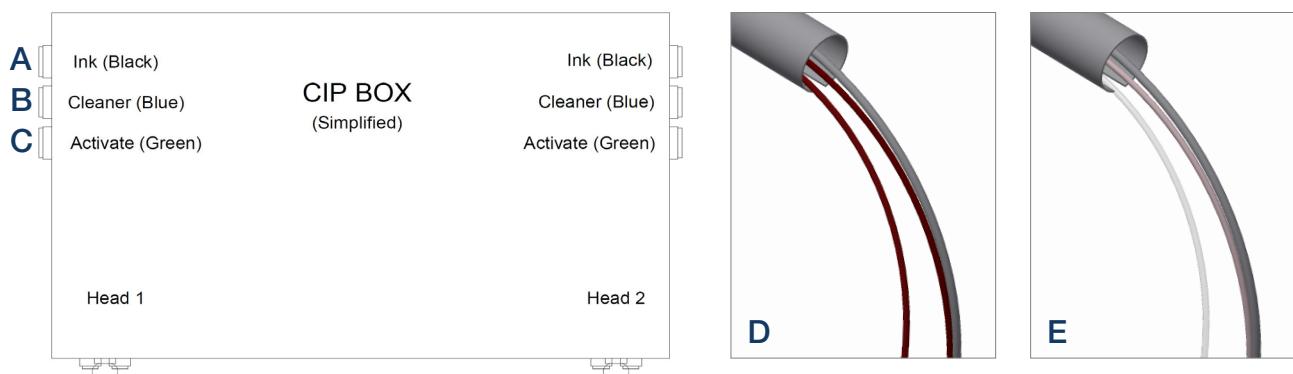

CONTACT

Southern Europe
+34 932 643 800
as.se@frontmatec.com

Central/Eastern Europe
+49 252 185 070
as.ce@frontmatec.com

Northern Europe
+45 36 999 099
as.ne@frontmatec.com

Poland
+48 227 345 551
as.ce@frontmatec.com

Western Europe
+31 886 294 000
as.we@frontmatec.com

Russia
+7 495 424 9559
as.ru@frontmatec.com