

## SERVICE SOLUTIONS // HOW TO

# HOW TO PROLONG THE LIFETIME ON YOUR AUTOMARKER M1™ WITH PROPER CLEANING

### Start of day



Preparation: Have a paper towel ready & place the waste tube from the CIP box in an appropriate container.

1. Press “ink” button - **position A** - until you can see the ink in the tubes leading to the print head - **position D**
2. Release the “ink” button - **position A**
3. Place a paper towel in front of the print head and press the “activate” button - **position C** - hold it for 10-15 seconds to ensure nozzles are filled with ink for a proper print on the animal
4. Repeat procedure on the other print head
5. Make sure the AutoMarker M1™ is online ready to print

### End of day

Preparation: Have a paper towel and the protective cap ready. Place the waste tube from the CIP box in an appropriate container.

1. Press the “cleaner” button - **position B** - until the ink is flushed out of the tubes leading to the print head - **position E**
2. Release the “cleaner” button - **position B**
3. Place a paper towel in front of the print head and press the “activate” button - **position C** - hold it for 10-15 seconds to clean the nozzles from ink
4. Put the protective cap on the print head
5. Repeat procedure on the other print head

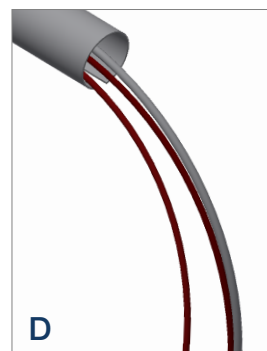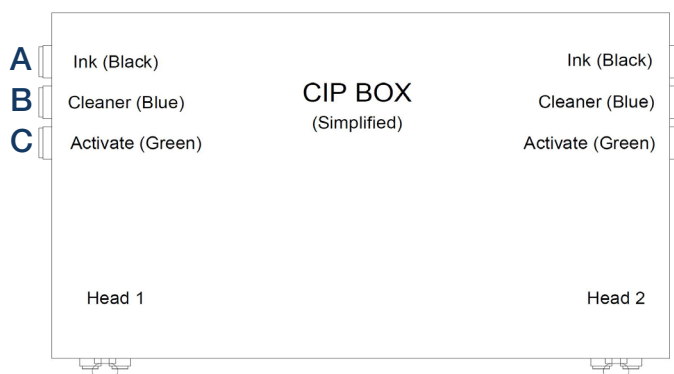

## CONTACT

Central/Eastern Europe  
+49 252 185 070  
service.de@frontmatec.com

Northern Europe, Kolding  
+45 36 999 099  
service.kol.dk@frontmatec.com

Northern Europe, Tandslet  
+48 227 345 551  
service.tan.dk@frontmatec.com

Southern Europe  
+34 932 643 800  
service.es@frontmatec.com

Western Europe  
+31 886 294 000  
service.nl@frontmatec.com